

# Fantasea Line **BlueRay YS Mount A**

(Cat. No. 4028)

## Instruction Manual



## 1. Introduction

The *BlueRay YS Mount A* attaches to a selection of Fantasea lights and enables mounting them on any arm or connector that features a standard YS Connector at the top, such as Fantasea Flex Arms.

The *BlueRay YS Mount A* is made of black anodized Aluminum (light holder) and injected Polycarbonate (YS adaptor).

For a list of Fantasea lights compatible with the *BlueRay YS Mount A*, please visit our website – [www.fantasea.com](http://www.fantasea.com)



## 2. Included in Package




## 3. Instructions for Use

Follow the instructions below in order to mount a Fantasea light on any arm or connector that features a standard YS Connector at the top, such as on Fantasea Flex Arms.

- A. In order to install the YS Mount on the light, first remove the screw from the bottom of the YS Mount by unscrewing it all the way out (image #1).
- B. Install the YS Mount by sliding it on the body of the light, starting from its rear end and all the way towards the LED head, until it reaches a widening and can no longer be slid forward (image #2). If a hand lanyard is installed on the light, make sure that it doesn't interfere or get caught between the light and the YS Mount.



- C. The rubber sleeve included in the package is an optional accessory, designed to prevent the light from slipping out of the YS Mount. If the light seems to be slipping out of the YS Mount, install the rubber sleeve by sliding it on the body of the light, starting from its rear end and all the way towards the YS Mount (image #3 on the following page). This should prevent the light from slipping out of the YS Mount.

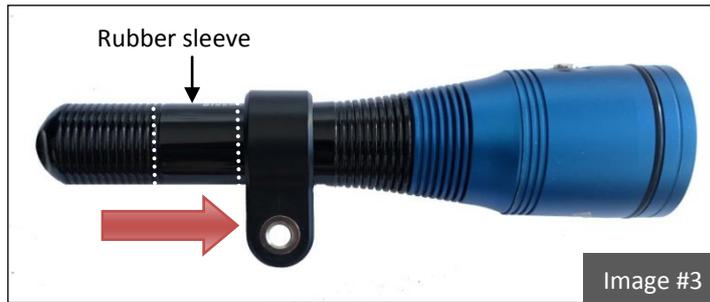

- D. With the YS Mount installed on the light, position it over the arm so that the YS Connector on top of the arm is aligned with the YS Mount at the bottom of the LED light (image #4).
- E. Install the screw all the way through the YS Mount and YS Connector on the arm (image #5). Tighten it enough to keep the light in a fixed position (image #6).
- F. It is always advisable to use the hand lanyard to secure the light to a camera tray, housing or arm as an extra precaution.
- G. After each dive, carefully soak and rinse all exterior components in fresh water. Store all equipment in a protected, dry and shaded area.



#### 4. Fantasea Products Consumer Limited Warranty

“Fantasea” warrants this Fantasea Line branded product against defects in materials and workmanship under reasonable use for a period of ONE (1) YEAR, (two years, where required by law as determined by the origin of the authorized dealer). This warranty is effective from the date of retail purchase from Fantasea or an authorized Fantasea dealer, by the original end-user purchaser (“Warranty Period”). This warranty does not cover any commercial use of the product. If a product defect arises and a valid claim is received within the Warranty Period, at its option, Fantasea, or its authorized service facilities will either (1) repair the product defect at no charge, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. The warranty will not extend beyond the original warranty period.

Your Fantasea Product should be registered within 30 days of purchase. You must keep the proof of purchase which indicates the date on which the purchase was made; as you may be required to show proof of purchase if you need warranty service.

The following conditions apply:

1. This warranty extends to the original purchaser only. It is not assignable or transferable.
2. The warranty does not cover damage resulting from misuse, abuse, negligence, or accidents. Proper maintenance of the Product is the responsibility of the owner.
3. The warranty does not cover damage directly or indirectly resulting from the use of unauthorized replacement parts or service performed by unauthorized facilities.
4. This warranty does not cover any damage to any other product used in conjunction with the Fantasea product, including cameras and lenses, and resulting from any defect in the product materials or workmanship.
5. The cost of sending the product back to Fantasea or its authorized service facilities is the responsibility of the customer.
6. The warranty does not cover any incidental damages resulting from any defects in the product. This expressly includes any travel reimbursements or any other costs associated with the purchaser’s optional use of the product.

The conditions of this warranty are expressly in lieu of all other expressed warranties, including the payment of consequential or incidental damages for the breach of any warranty. Please register your product on line at this URL: <http://www.fantasea.com/registration>.

For further information, please contact us at [www.fantasea.com/contact](http://www.fantasea.com/contact) or visit our website [www.fantasea.com](http://www.fantasea.com)